


Floor installation

- Please make sure that you have the correct parts and accessories for your van model.
- Use compatible tools to assembly all the accessories.
- Use only original Kore accessories for your floor.
- Install in accordance with the floor drawing.
- Remove the original lashing cups.
- If support pieces for the floor are provided, attach those in the correct places before installing the floor.
- If a support piece for the threshold is provided, fix it to the floor from below before installing the floor section into the van.
- Place the floor sections into the van, starting from the front.
 - If you are also installing plastic Kore wheel arch covers, place those over the wheel arches before installing the floor.
 - You may also use adhesive to fix the floor to the van. **Please note that no glue for the floor is included!**
- Secure the floor section joint(s) with the provided screws.
- Place the support pieces / washers under the lashing cups. Carefully adjust the number of washers to prevent the floor from bending. Make sure you are using enough washers to fill the gap.
- Install the lashing cups and lashing rings and bolt down. If there are bolts provided with the floor, replace the original bolts with the new Kore bolts.
- If you need more support, please contact the Kore Service Center or your distributor.

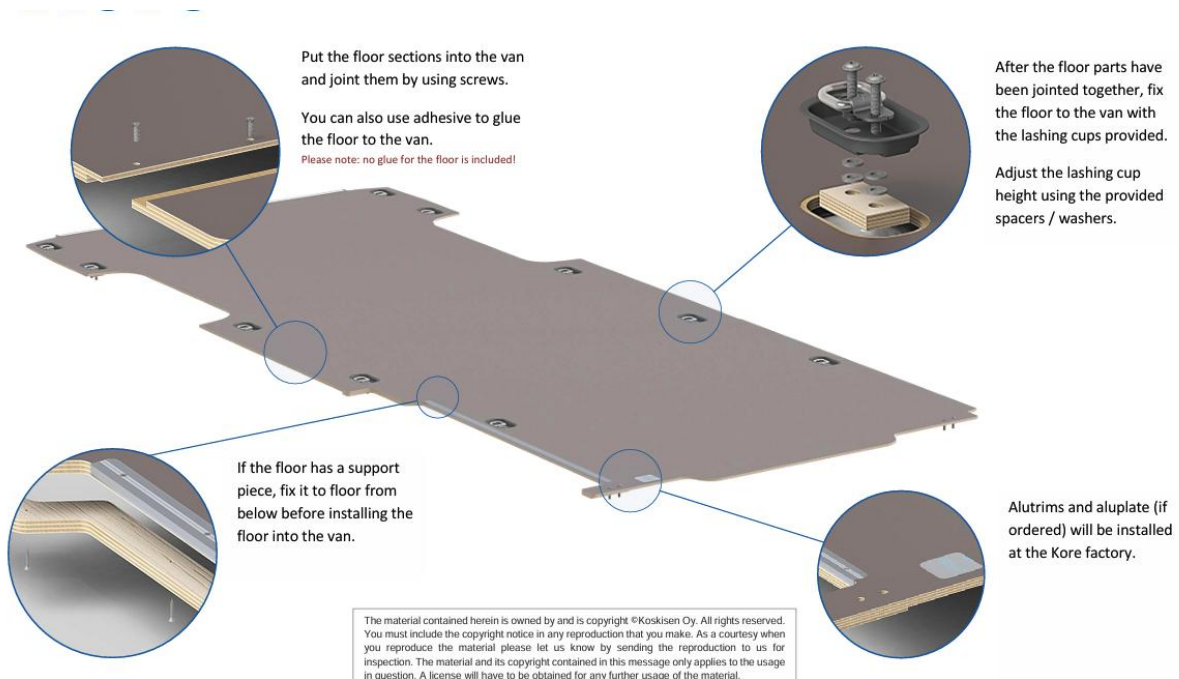

► Lining installation

Floor installation

- Please make sure that you have the correct parts and accessories for your van model.
- Use compatible tools to assembly all the accessories.
- Use only original Kore accessories for your floor.
- Install in accordance with the floor drawing.
- Remove the original lashing cups.
- If support pieces for the floor are provided, attach those in the correct places before installing the floor.
- If a support piece for the threshold is provided, fix it to the floor from below before installing the floor section into the van.
- Place the floor sections into the van, starting from the front.
 - If you are also installing plastic Kore wheel arch covers, place those over the wheel arches before installing the floor.
 - You may also use adhesive to fix the floor to the van. **Please note that no glue for the floor is included!**
- Secure the floor section joint(s) with the provided screws.
- Place the support pieces / washers under the lashing cups. Carefully adjust the number of washers to prevent the floor from bending. Make sure you are using enough washers to fill the gap.
- Install the lashing cups and lashing rings and bolt down. If there are bolts provided with the floor, replace the original bolts with the new Kore bolts.
- If you need more support, please contact the Kore Service [Center](#) or your distributor.

